

## Использование Interwrite Mobi Dock™

Док-станция **Interwrite Mobi Dock** позволяет хранить и заряжать одновременно три интерактивных планшета **Interwrite Mobi 500, 501** или **MOBI VIEW**. Содержание данной инструкции:

- Как подсоединить интерактивный планшет Interwrite Mobi к док-станции Interwrite Mobi Dock
- Как отсоединить интерактивный планшет Interwrite Mobi от док-станции Interwrite Mobi Dock
- Проверка статуса зарядки
- Подключение зарядного устройства
- Монтаж док-станции Interwrite Mobi Dock на стену
- Подсоединение двух интерактивных планшетов Interwrite Mobi Dock для их одновременной зарядки
- Блокировка док-станции Interwrite Mobi Dock

### Присоединение интерактивного планшета Interwrite Mobi у док-станции Interwrite Mobi Dock

1. Нажмите на **защитную панель** для перевода её в режим блокировки

Защитная панель →



Заблокировано



Разблокировано

2. До того, как подключить интерактивный планшет **Mobi** к док-станции для зарядки убедитесь, что планшет выключен.




3. Расположите планшет Mobi так, чтобы **разъём** в его задней верхней части располагался напротив замка **фиксатора** в док-станции Mobi Dock.



4. Вставляйте планшет Mobi в док-станцию до появления характерного щелчка.
5. Снова нажмите на защитную панель для перевода её в разблокированный режим.

## Locking the Interwrite Mobi Dock

1. Make sure the Release Pad is in the **locked position**.
2. Locate the **hole for the lock** on the right side of the Release Pad.

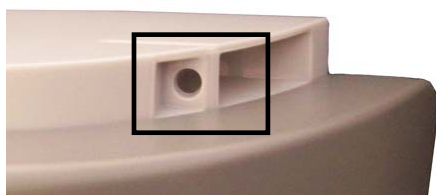

3. Insert the lock into the hole and secure the lock.

## Removing the Interwrite Mobi from the Interwrite Mobi Dock


1. Push **down** on Release Pad until it is **flush with the Mobi Dock** in the *unlocked* position.
2. Take hold of the Mobi and pull it out of the Docking Station.
3. Press Release Pad again into the Locked Position after all the Mobis are removed so it will be ready for storage and recharging.





## Checking Charging Status


Use the following table to indicate what the lights mean.

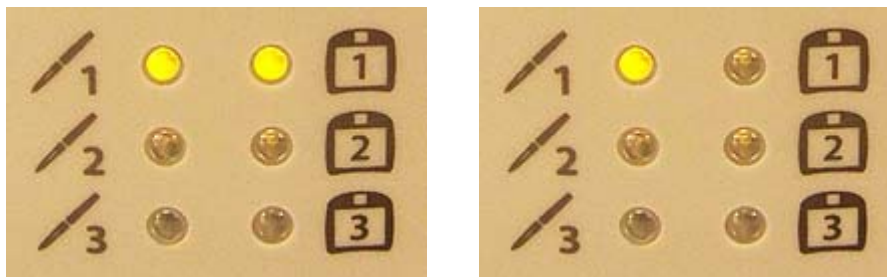

Light	Status
All Lights Flash On	Mobi Dock has been plugged into an power outlet
Both Lights are solid	Mobi and Interactive Pen are <b>charging</b>
Mobi Light is Off Pen Light is On	Mobi is <b>finished charging</b> <b>Note:</b> the pen light will always remain lit. The light will be off if the pen is not in the Mobi or Mobi Learner.
Lights flashing	The Mobi or Mobi Learner was inserted into the Mobi Dock while still on. Turn off the Mobi and reinsert the Mobi.

## Connecting the Charging Source

1. Turn the unit over and locate one of the two Power Jack Outlets. Select the one that will best suit your needs after hanging the unit or placing it on the desk.

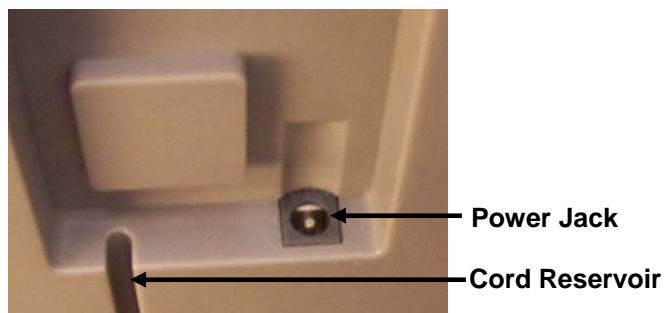

2. Insert the Adapter into the Power Jack and thread the cord through the Cord Reservoir so it stays flush with the back of the unit.





## Mounting the Interwrite Mobi Dock to the Wall

You have two options for mounting the Mobi Dock.

- Using the keyhole **mounting holes** on the back of the Mobi Dock.
- Using the **mounting holes through the front** of the Mobi Dock. This option allows for permanent attachment to the wall.

**Note:** Use the appropriate mounting nuts, bolts, and screws for your wall options. Due to the multitude of mounting options, eInstruction does not supply mounting screws for the Mobi Dock.





---

## Using the Keyhole Mounting Holes to Mount the Mobi Dock

1. Locate a secure mounting area, such as a stud and measure for the three keyhole openings.
2. Install the appropriate screws for your wall, leaving 1/8<sup>th</sup> of an inch between the head of the screw and the wall.
3. Slide the unit over the screws and allow it to move into place, securing the unit to the wall.
4. Slide the unit up and out to remove it.

## Using the Permanent Mounting Holes to Mount the Mobi Dock

1. Locate a secure mounting area, such as a stud and measure for the two openings.
2. Place the unit in the appropriate location and mark the holes for mounting.
3. Remove the unit and drill two pilot holes where the markings are located.
4. Place the unit back in the marked location, and install the screws into the wall, securing the unit to the wall.

## Connecting Two Interwrite Mobi Docks to Charge Simultaneously

You can use a double-headed charger to connect two Mobi Docks, allowing you to charge **up to six** Mobis or Mobi Learners at the same time with the same charger.

1. Take one end of the adapter and connect it as you would with a single connection within the Mobi Dock.
2. Repeat for the second unit.
3. Install the units next to each other, and near the same outlet.
4. Place the Mobis and Mobi Learners into the units to charge, as you would a single unit.

